 






Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Standby		Shift + Power
	Input		AV
	Mute		Mute
	Vol Up		Shift + Right
	Vol Down		Shift + Left
	Volume+		Vol +
	Volume-		Vol -
	T/V/CH Level		Smart
	CH/Album Up		Ch +
	CH/Album Down		Ch -
	Up		Up
	Down/Search		Down
	Sel >		Right
	< Sel		Left
	Enter		Ok
	Play		Play

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	</Pause		Pause
	>> /Preset+		>>
	<</Preset-		<<
	>>/Tune+		>>
	<</Tune-		<<
	Setup/Home		Media
	Test/Disc Menu		Menu
	Dimmer/Return		Back
	Display		Info
	RDM/Room2		Exit
	Audio		Options
	Surround/Play List >		Green
	< Surround/Play List		Red
	Stereo/Play M		TV/R
	1 / Tuner		1
	2 / CD		2





Originalfernbedienung Ersatzfernbedienung

F.AUX 3	3 / F.Aux	3	3
TAPE 4	4 / Tape	4	4
BT IN 5	5 / BT In	5	5
VIDEO 1 6	6 / Video 1	6	6
VIDEO 2 7	7 / Video 2	7	7
VIDEO 3 8	8 / Video 3	8	8
9	9	9	9
0	0	0	0
+10	10	GUIDE	Guide
EXT.IN D	Ext In	D	Blue
SLEEP PROG	Sleep	SLEEP	Sleep
AVR	AVR	SHIFT + 1	Shift + 1
RECALL DOCK DOCK	Dock	SHIFT + 2	Shift + 2
SELECT CD CD	CD	SHIFT + 3	Shift + 3
AUX AUX	AUX	SHIFT + 4	Shift + 4
BD BD	BD	SHIFT + 5	Shift + 5
TV TV	TV	SHIFT + 6	Shift + 6

Originalfernbedienung Ersatzfernbedienung


SAT	SAT	SHIFT + 7	Shift + 7
CBL	CBL	SHIFT + 8	Shift + 8




Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Standby		Shift + Power
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Setup/Home		Media
	Test/Disc Menu		Menu
	Play		Play
	Stop		Stop
	>>		>>
	<<		<<
	I<<		I<<
	>>I		>>I
	Display		Info
	Dimmer/Return		Back











 

 
 
 
 



 






 



 
 
Originalfernbedienung Ersatzfernbedienung

	Audio		Dual
	Subtitle		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





Originalfernbedienung Ersatzfernbedienung

	CD		Power
	Play		Play
	Stop		Stop
	Pause		Pause
	I<<		I<<
	>>I		>>I
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0


 
 
 

 



 
Originalfernbedienung Ersatzfernbedienung




Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Standby		Shift + Power
	RDM/Room2		Exit
	CH/Album Up		Ch +
	CH/Album Down		Ch -
	Play		Play
	Pause		Pause
	Stop		Stop
	>>		>>
	<<		<<
	I<<		I<<
	>>I		>>I
	Test/Disc Menu		Menu
	Display		Info
	Enter		Ok
	Up		Up
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Audio		Options
	< Surround/Play List		Red
	Surround/Play List >		Green
	Stereo/Play M		TV/R
	Sleep / Dock M.		Sleep

