





 

 


 




 




 

 
 
 
 

 

 






 





 


 



 
 



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	.		Shift + Guide
	Recall		Back
	Menu		Menu
	Source		AV
	Exit		Exit

**Originalfernbedienung Ersatzfernbedienung**

	Tv Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	S.M.		Smart
	P.M.		Media
	CH+		Ch +
	CH-		Ch -
	EPG Page Up		Shift + Up
	EPG Page Down		Shift + Down
	Sleep		Sleep
	P.G.		Format
	Aspect		3D





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	CH List		List				
	EPG		Guide				
	FAV		Pre Ch				
	DTV Strenght		D. Menu				
	TV		TV/R				
	AV		Eject				
	HDMI		Text				
	YPbPr		Shift + Format				
	CC		Subt				
	MTS/SAP		Dual				
	VGA		Options				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

