



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Play/Pause		Shift + Play /
	Play/Pause		Play / Slow
	Source		AV / Input / RDS
	Open / Close		Eject / Surround
	Repeat		Green / APP / Repeat
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	Memory		Setup / OPT /
	CH+		CH+ / Page+
	Stop		Stop / Hold
	USB		Shift + 8
	CH-		CH- / Page-
	Prev		I<< / Preset-
	Vol+		Vol+
	Next		>>I / Preset+
	Vol-		Vol-
	Mute		Mute / Dimmer

