



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Page-		I<<
	Page+		>>I
	Subtitle		Subt
	Teletext		Text
	Zoom		Eject

Originalfernbedienung Ersatzfernbedienung

	Info		Info
	EPG		Guide
	FAV		Pre Ch
	Audio		Dual
	Recall		Back
	Menu		Menu
	Exit		Exit
	Up / CH+		Up
	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Vol -
	Left / Vol-		Left
	OK		Ok
	Red / Play/Pause		Red





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------	-----------------------	---------------------

	Red / Play/Pause		Play
	Red / Play/Pause		Pause
	Green / TV/Radio		Green
	Green / TV/Radio		TV/R
	Yellow / Edit		Yellow
	Blue / Preview		Blue

