






Originalfernbedienung Ersatzfernbedienung

	power		Power
	mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P-		Shift + Ch -
	P-		l<<
	P+		>>l
	P+		Shift + Ch +
	Digital TV		TV/R


 


Originalfernbedienung Ersatzfernbedienung

	Radio		Shift + TV/R
	FAV		Pre Ch
	Up		Up
	Up		Ch +
	Left		Left
	Left		Vol -
	SLCT		Ok
	Righ		Right
	Right		Vol +
	Down		Down
	Down		Ch -
	Lang		Dual
	Pause		Pause
	Sound		Shift + Dual
	EPG		Guide
	Menu		Menu
	SAT		Smart





Originalfernbedienung Ersatzfernbedienung

	FUNC		Media
	Exit		Exit

Originalfernbedienung Ersatzfernbedienung