


















Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Mute		Mute / Dimmer
Txt Stop		Stop / Hold
Reveal		Pause / Step / Freeze
Update		Play / Slow
Info		Info / Angle
Subt.List		Subtitle / EQ
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top
Text		Text / Goto
Txt Expand		Zoom / Size
TV/AV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Display		Display / Media
Menu Left		Left

Originalfernbedienung Ersatzfernbedienung





 
 
 
 
 
 

OK Enter		OK
Menu Right		Right
Menu Off		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-
Menu audio		Audio / Lang I/II
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7



Originalfernbedienung Ersatzfernbedienung

8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--
0/10		0
2.Fav P/C 2.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Color+ P.Std		Picture / Format
Off/Tim		Setup / OPT /
Tune-		<< / Tune-
Audio-		Shift + Vol-
Mix Scan		Smart / List
Audio+		Shift + Vol+
Game Coo		Rec / Rec Mode
Tune+		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

Color- S.Std		Sound / Title
Contrast+		>> / Preset+
Contrast-		<< / Preset-
Surround		Eject / Surround
Nicam/Mono		Shift + Audio / Lang I/II
AV 2		Shift + AV / Input / RDS
Bright+ Mode		Shift + CH+ /
Level L		Shift + Left
Level R/Woofers		Shift + Right
Disp		Shift + Display / Media
Bright- Sys		Shift + CH- /

