




 



 

 





 

 


















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|---------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | -/-- |  | Guide |
|  | Prev. Ch. |  | Pre Ch |
|  | Sleep |  | Sleep |
|  | Still |  | Options |
|  | Source |  | AV |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|----------------|
|  | Aspect |  | 3D |
|  | CH + |  | Ch + |
|  | CH - |  | Ch - |
|  | Vol + |  | Vol + |
|  | Vol - |  | Vol - |
|  | Info |  | Info |
|  | Nicam/A2 / Audio |  | Dual |
|  | Auto |  | Smart |
|  | P.Mode |  | Shift + Format |
|  | Menu |  | Menu |
|  | S.Mode |  | Shift + Dual |
|  | Exit |  | Exit |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |



