







 










 

 

 







 






Originalfernbedienung Ersatzfernbedienung

|   |         |   |       |
|---|---------|---|-------|
|    | Power   |    | Power |
|    | Mute    |    | Mute  |
|    | Display |    | Info  |
|    | CH+     |    | Ch +  |
|    | CH-     |    | Ch -  |
|    | Vol+    |    | Vol + |
|    | Vol-    |    | Vol - |
|    | 1       |    | 1     |
|    | 2       |    | 2     |
|    | 3       |    | 3     |
|   | 4       |   | 4     |
|  | 5       |  | 5     |
|  | 6       |  | 6     |
|  | 7       |  | 7     |
|  | 8       |  | 8     |
|  | 9       |  | 9     |
|  | 0       |  | 0     |

Originalfernbedienung Ersatzfernbedienung

|   |           |   |        |
|---|-----------|---|--------|
|    | Subpage   |    | Media  |
|    | Pre-CH    |    | Pre Ch |
|    | PC        |    | Smart  |
|    | Tv/Video  |    | TV/R   |
|    | Sleep     |    | Sleep  |
|    | Sound     |    | Dual   |
|    | Up        |    | Up     |
|    | Down      |    | Down   |
|    | Right     |    | Right  |
|    | Left      |    | Left   |
|   | Menu      |   | Menu   |
|  | Mix       |  | AV     |
|  | Teletext  |  | Text   |
|  | Text Size |  | Format |
|  | Red       |  | Red    |
|  | Green     |  | Green  |
|  | Yellow    |  | Yellow |





Originalfernbedienung Ersatzfernbedienung

|   |          |   |         |
|---|----------|---|---------|
|  | Blue     |  | Blue    |
|  | Index    |  | List    |
|  | Subtitle |  | Subt    |
|  | Hold     |  | D. Menu |
|  | Reveal   |  | Options |
|  | PIP/POP  |  | 3D      |
|  | PIP Swap |  | Back    |
|  | PIP Size |  | Eject   |
|   |          |   |         |
|   |          |   |         |
|   |          |   |         |
|   |          |   |         |
|   |          |   |         |
|   |          |   |         |
|   |          |   |         |
|   |          |   |         |
|   |          |   |         |
|   |          |   |         |
|   |          |   |         |
|   |          |   |         |
|   |          |   |         |
|   |          |   |         |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

