




 





 















 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Subtitle		Subt
	Position		Shift + Media
	Group		Shift + Smart
	Setup		Options
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	>=10 / -/--		Guide

Originalfernbedienung Ersatzfernbedienung

	Disc		Pre Ch
	DD Pro Logic		Smart
	CH Select		Media
	Test		Text
	Super SRND		Ch -
	Top Menu / Direct Navigator		D. Menu
	Top Menu / Direct Navigator		List
	EQ		TV/R
	Menu/Playlist		Menu
	Super Surround		Format
	Display		Info
	Super 3D AI EQ		3D
	AV Effect		AV
	Return		Back
	Up		Up
	Left		Left
	Enter		Ok



