
 



 

 



 

 

 
 

 
 
 
 
 




 










**Originalfernbedienung Ersatzfernbedienung**

	Timer		AV
	Sleep		Sleep
	Clock		Options
	Edit/Check		Info
	PRGM		Shift + Sleep
	Random		TV/R
	Repeat/Mono		Text
	Open/Close		Eject
	1		1
	Disc Direct Play 1		Shift + 1
	2		2
	Disc Direct Play 2		Shift + 2
	3		3
	Disc Direct Play 3		Shift + 3
	4		4
	Disc Direct Play 4		Shift + 4
	5		5

**Originalfernbedienung Ersatzfernbedienung**

	Disc Direct Play 5		Shift + 5
	6		6
	Disc Direct Play 6		Shift + 6
	7		7
	Disc Direct Play 7		Shift + 7
	8		8
	9		9
	0		0
	+10		Guide
	Karaoke Enter		Ok
	Karaoke		Media
	T.Bass		Dual
	GEQ		Smart
	CD		Yellow
	Video/AUX		Red
	Tuner/Band		Green
	Tape Deck 1/2		Blue



