




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|----------------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | Pre Pg |  | Pre Ch |
|  | V.Size |  | Eject |
|  | Favourite |  | Shift + Pre Ch |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Text |  | Text |
|  | Input / TV/Video |  | TV/R |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|--------|
|  | Menu / Set |  | Menu |
|  | Menu / Set |  | Ok |
|  | Exit |  | Exit |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Right |  | Right |
|  | Down |  | Down |
|  | PG+ |  | Ch + |
|  | PG- |  | Ch - |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | MTS |  | Media |
|  | PG Info |  | Info |
|  | Picture |  | Format |
|  | Still |  | Pause |
|  | Sound |  | Dual |
|  | Sleep |  | Sleep |



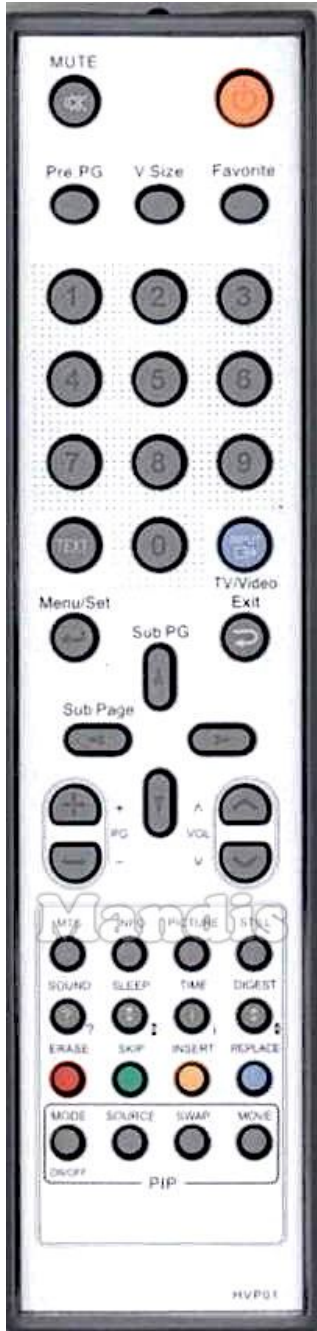

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-----------------|--|----------------|
| | Time | | AV |
| | Bright | | Options |
| | Red / Erase | | Red |
| | Green / Skip | | Green |
| | Yellow / Insert | | Yellow |
| | Blue / Replace | | Blue |
| | PIP On/Off | | Shift + Red |
| | PIP Source | | Shift + Green |
| | PIP Swap | | Shift + Yellow |
| | PIP Move | | Shift + Blue |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

