
 









 

 




 
 





 

 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv Standby		Shift + Power
	Input Tv		Shift + AV
	Mute Tv		Shift + Mute
	Vol+ Tv		Shift + Right
	Vol- Tv		Shift + Left
	CH+ Tv		Shift + Ch +
	CH- Tv		Shift + Ch -
	TV		TV/R
	Aspect/Ratio		Format
	HD		Smart
	Mosaic		Media
	Mute		Mute
	Messages		Options
	Help		AV
	Cancel		Shift + Back
	Guide		Guide

Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		Ok
	FAV		Pre Ch
	Planner		Text
	Back		Back
	Rec		Rec
	Pause		Pause
	Stop		Stop
	<<		<<





Originalfernbedienung Ersatzfernbedienung

	Play		Play
	>>		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	*		Dual

Originalfernbedienung Ersatzfernbedienung

	#		Subt

