
 


 

 








 

 
 

 
 





 
 
 






**Originalfernbedienung Ersatzfernbedienung**

PWR On/Off		Power
Mute		Mute
Epg		Shift + Guide
Info		Shift + Info
App		Media
Opt?		Options
Subt.List		Subt
Sleep Timer		Sleep
TV		TV/R
Video		D. Menu
Text		Text
Zoom		Eject
TV/SAT		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left

**Originalfernbedienung Ersatzfernbedienung**



 


 






 
 
 

OK Enter		Ok
Menu Right		Right
Exit		Exit
Menu Down		Down
Back		Back
Audio		Dual
Volume+		Vol +
CH/Page+		Ch +
Volume-		Vol -
CH/Page-		Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7



**Originalfernbedienung Ersatzfernbedienung**

8tuv		8
9wxyz		9
Guide Pilote		Guide
0/10		0
FAV Pref.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue
Dev		List
On/Off	 + 	Shift + Power
	 + 	Shift + Mute
West	 + 	Shift + I<<
+	 + 	Shift + Subt
Freeze		Stop
Dec/Pause		Pause
Sys/Serv	 + 	Shift + Sleep

**Originalfernbedienung Ersatzfernbedienung**

Scan/Setup	 + 	Shift + TV/R
SAT Sky		Smart
	 + 	Shift + Vol +
		I>>
	 + 	Shift + Vol -
Home Cinema	 + 	Shift + Media
East	 + 	Shift + Red
		I<<
Lang./Rewind		I<<
H/V Play		Play
LNB F.Forward		I>>

