



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	UHF		AV
	Audio		Dual
	Text		Text
	Sat/TV		Subt
	Red		Red

Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow/FAV+		Yellow
	Blue		Blue
	White/FAV-		Media
	Pause		Pause
	Mute		Mute
	Menu		Menu
	Exit		Exit
	PR+		Ch +
	PR-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Tv/Radio	 TV/R		
 FAV	 Pre Ch		
 P/N	 Options		
 EPG	 Guide		
 Recall	 Back		

