


 

 

 

 





 





 







 

 


 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Input		AV
	Tv		TV/R
	PC		Smart
	AV Mode		3D

**Originalfernbedienung    Ersatzfernbedienung**

	Sleep		Sleep
	Vol+		Vol +
	Vol-		Vol -
	Freeze		Shift + Media
	View Mode		Media
	CH+		Ch +
	CH-		Ch -
	Surround		Dual
	MPX		Format
	Display		Info
	Menu		Menu
	Exit		Exit
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left



