

 
 

 

 
 
 

 
 
 

 

 

 

 

 












 
 










 





 
 



 


 



 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/Input Select		AV
	-/--		Guide
	Tracking/V-Lock+		Ch +
	Tracking/V-Lock-		Ch -
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Search		Shift + TV/R
	Show View		Smart
	OSD/Display		Info
	Replay		Pre Ch
	Direct Tv Rec		TV/R
	I<< Index		I<<
	Index >>I		I>>
	Rec		Rec
	Pause/Step		Pause
	Menu		Menu
	OK		Ok
	Play/Up		Play
	Stop/Down		Stop
	>>/Right		>>
	<</Left		<<
	SP/LP		Format







Originalfernbedienung Ersatzfernbedienung

	Timer Rec		3D
	Prog/Check		Sleep
	Reset		Back
	Audio		Dual
	VPS/PDC		Subt
	AV Link		Media
	TV Aspect		Eject
	Still Album		List
	Up		Up
	Down		Down
	Date+		Right
	Date-		Left
	On+		Red
	On-		Green
	Off+		Yellow
	Off-		Blue
	Cancel		D. Menu

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
---	------	---	------





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV/Text		Text
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide

Originalfernbedienung Ersatzfernbedienung

	AV Input Select		AV
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

