
 
 







 




 

 

 



 

 
 
 


 


 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Opt?	 Options	Exit	 Exit
Epg	 Shift + Guide	Menu Down	 Down
Info	 Shift + Info	Volume+	 Vol +
App	 Media	CH/Page+	 Ch +
Subt.List	 Subt	Volume-	 Vol -
Sleep Timer	 Sleep	Audio	 Dual
TV	 TV/R	CH/Page-	 Ch -
Video	 D. Menu	1. ?	 1
Text	 Text	2abc	 2
Zoom	 Eject	3def	 3
TV/SAT	 AV	4ghi	 4
Menu	 Menu	5jkl	 5
Menu Up	 Up	6mno	 6
Display	 Info	7pqrm	 7
Menu Left	 Left	8tuv	 8



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
9wxyz	 9		 I<<
Guide Pilote	 Guide		
0/10	 0		
FAV Pref.	 Pre Ch		
Red	 Red		
West	 +  Shift + I<<		
Freeze	 Stop		
Green	 Green		
Dev	 List		
East	 +  Shift + >>I		
Yellow	 Yellow		
Dec/Pause	 Pause		
LNB F.Forward	 >>		
H/V Play	 Play		
Lang./Rewind	 <<		
Blue	 Blue		
	 >>I		

