



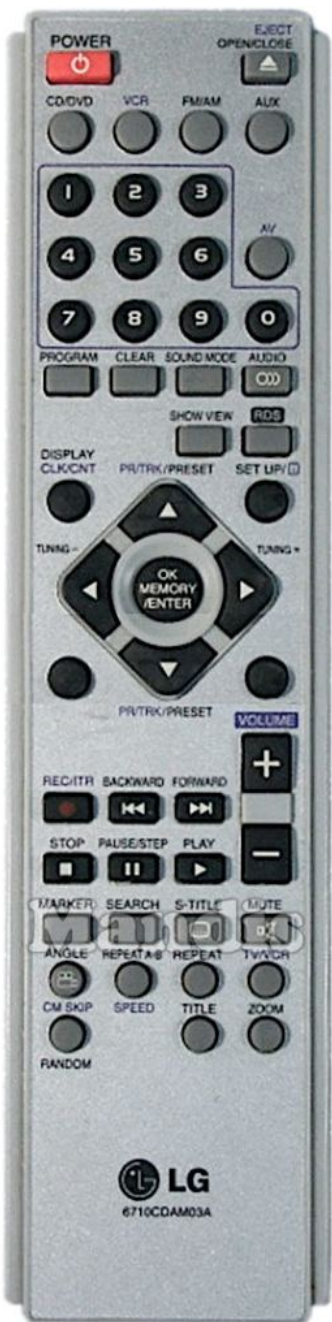 
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject / Open/Close		Eject
	CD/DVD	+	Shift + 1
	VCR	+	Shift + 2
	FM/AM	+	Shift + 3
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	Program		Sleep

Originalfernbedienung Ersatzfernbedienung

	Clear		Exit
	Sound Mode	+	Shift + Dual
	Audio		Dual
	Show View		Media
	RDS		List
	Display / CLK/CNT		Info
	Setup / i		Options
	Setup / i		Menu
	Up / PR/TRK + / Preset +		Up
	Up / PR/TRK + / Preset +		Ch +
	Left / Tuning -		Left
	Right / Tuning +		Right
	OK / Memory /		Ok
	Down / PR/TRK - / Preset -		Down
	Down / PR/TRK - / Preset -		Ch -
	Return		Back
	Disc Menu		D. Menu





Originalfernbedienung Ersatzfernbedienung

	Volume +		Vol +
	Volume -		Vol -
	Mute		Mute
	Rec / ITR		Rec
	I<< Backward		I<<
	I<< Backward		I<<
	>>I Forward		>>I
	>>I Forward		>>
	Stop		Stop
	Pause/Step		Pause
	Play		Play
	Marker		Pre Ch
	Search		Shift + TV/R
	S-Title		Subt
	Angle		Format
	Repeat A-B /		Text
	Repeat		Shift + Text




 




Originalfernbedienung Ersatzfernbedienung

	TV / VCR		TV/R
	CM Skip / Random		3D
	Title		Smart
	Zoom		Shift + Eject













 






 

 






 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	Program		Sleep
	Clear		Exit
	O))/Audio		Dual
	ShowView		Media

Originalfernbedienung Ersatzfernbedienung

	Display/CLK/CN		3D
	i/Setup		Info
	Up		Up
	PR/TRK+		Ch +
	PR/TRK-		Ch -
	Down		Down
	Right		Right
	Left		Left
	OK/Enter		Ok
	Return		Back
	Disc Menu		D. Menu
	Rec/ITR		Rec
	I<<		I<<
	<<		<<
	>>		>>
	>>I		>>I
	Stop		Stop





Originalfernbedienung Ersatzfernbedienung

	Pause/Step		Pause
	Play		Play
	Marker		Green
	Search		Shift + TV/R
	[...]/Subtitle		Subt
	Camera/Angle		Red
	A-B/LP		Yellow
	Repeat		Text
	Tv/VCR		TV/R
	Random/CM		Blue
	Title		Guide
	Zoom		Shift + Eject

Originalfernbedienung Ersatzfernbedienung

