 

 






 






 












 





 

 
















 
 

 






 

 
 



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-------|
|  | Mute |  | Mute |
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | -/-- |  | Guide |
|  | AV |  | AV |
|  | Menu |  | Menu |
|  | Red |  | Red |
|  | OK |  | Ok |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|--------|
|  | Green |  | Green |
|  | P:P |  | Pre Ch |
|  | Yellow |  | Yellow |
|  | Analog |  | Smart |
|  | Blue |  | Blue |
|  | Up |  | Up |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Left |  | Left |
|  | Recall |  | Back |
|  | Sleep |  | Sleep |
|  | Status |  | 3D |
|  | Tv/TXT |  | Text |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------|--|--------------|
| | Stop | | Stop |
| | Reveal | | Media |
| | Size | | Format |
| | Mix | | Options |
| | Index | | Info |
| | Subcode | | Subt |
| | Cancel | | Shift + Back |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

