





































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DTV/ATV		Setup / OPT /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Still		Shift + Pause / Step /
	0		0
	Recall		Back / Return
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	i		Info / Angle
	P+		CH+ / Page+
	Mute		Mute / Dimmer
	Vol+		Vol+
	P-		CH- / Page-
	Sleep		Sleep / Timer
	Vol-		Vol-
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Aspect		Shift + Picture / Format
	Audio		Audio / Lang I/II
	Red		Red / Netflix / Search



