


































 

 



 

 











 

 



 



 

 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Standby		Power
	Open/Close		Eject
	Repeat		Text
	A-B		Green
	Program		Sleep
	Mute		Mute
	Y Pb.Pr		Format
	Dolby		Dual
	Display		Info
	<<		<<
	>>		>>
	Vol+		Vol +
	Vol-		Vol -
	I<<		I<<
	>>I		>>I
	Step/Pause		Pause
	Stop		Stop
	Title PBC		Guide
	Menu		Menu
	Setup		Options
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Play		Play
	Audio		Shift + Dual
	Subtitle		Subt
	Angle		Red
	Clear		Exit
	1		1
	2		2
	3		3



