






Originalfernbedienung Ersatzfernbedienung

 

 
 










	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	Info		Info
	Text		Text
	Source		AV
	Recall		Back

Originalfernbedienung Ersatzfernbedienung


 


	Sleep		Sleep
	EPG / Guide		Guide
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Aspect		Eject
	P.Mode		Format
	S.Mode	 + 	Shift + Dual
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Subt		Subt




Originalfernbedienung Ersatzfernbedienung

	Lang		Dual
	Rec List		Smart
	USB / Media		Media
	SOS / Help		TV/R
	Select		D. Menu
	Rec		Rec
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	Goto		3D
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Red / Timer		Red
	Red / Timer	 + 	Shift + AV
	Green		Green

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue

