






 



























 


 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Picture Size		Eject
	Picture Mode		Format
	Sound Select		Dual
	PIP On		Smart
	PIP Size		Shift + Eject
	PIP CH+		Shift + Ch +
	PIP CH-		Shift + Ch -
	PIP Source		Shift + AV
	PIP Swap		Shift + Back
	Up / CH+		Up
	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left

Originalfernbedienung Ersatzfernbedienung

	Left / Vol-		Vol -
	OK		Ok
	Menu		Menu
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Still		Pause
	Prev CH		Back
	Mute		Mute





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Info		Info				
	CH Scan		Media				
	Text On		Text				
	Text Mix		Shift + 1				
	Text Index		Shift + 2				
	Text Hold		Shift + 3				
	Text Subpage		Shift + 4				
	Text Size		Shift + 5				
	Text Reveal		Shift + 6				
	Text Store		Shift + 7				
	Text List		Shift + 8				
	Red / Auto CH		Red				
	Green / Add/Erase		Green				
	Yellow / MTS		Yellow				
	Blue / Sleep		Blue				
	Blue / Sleep		Sleep				

