




 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|---------------|-------------------------------------------------------------------------------------|-------------------|
|  | Display/Chara |  | Display / Media |
|  | Name Clip |  | Picture / Format |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 10/0 |  | 0 |
|  | >10 |  | Guide / EPG / -/- |
|  | Name |  | Sound / Title |
|  | Scroll |  | Back / Return |
|  | Menu/Delete |  | Menu / Home |
|  | Fader |  | Mute / Dimmer |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|-----------|---------------------------------------------------------------------------------------|-----------------------|
|  | Play Mode |  | Shift + Play / |
|  | I<< |  | I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
|  | Pause |  | Pause / Step / Freeze |
|  | Rec This |  | Rec / Rec Mode |
|  | Play |  | Play / Slow |
|  | Stop |  | Stop / Hold |
|  | >> |  | >> / Tune+ |
|  | << |  | << / Tune- |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Disc 1 |  | Shift + 1 |
|  | Disc 2 |  | Shift + 2 |
|  | Disc 3 |  | Shift + 3 |



