 
 
 
 

 

 










 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|---------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | Red / Eject |  | Red |
|  | Red / Eject |  | Eject |
|  | Green / Title |  | Green |
|  | Yellow / DVD |  | Yellow |
|  | Yellow / DVD |  | Options |
|  | Blue / A-B |  | Blue |
|  | <</[≡o] |  | << |
|  | >>/[≡?] |  | >> |
|  | l<</[≡+] |  | l<< |
|  | >>l/[≡..] |  | >>l |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | Stop |  | Stop |
|  | Angle / [≡i] |  | Smart |
|  | Return / Text |  | Text |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|--------------|
|  | Return / Text |  | Shift + Back |
|  | Subtitle |  | Subt |
|  | Display |  | Shift + Info |
|  | Menu / Info |  | Info |
|  | Menu / Info |  | D. Menu |
|  | Menu |  | Menu |
|  | Up |  | Up |
|  | Source |  | AV |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Right |  | Right |
|  | EPG |  | Guide |
|  | Down |  | Down |
|  | Exit |  | Exit |
|  | Vol+ |  | Vol + |
|  | FAV |  | Pre Ch |
|  | CH+ |  | Ch + |



