



Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	MUTE		Mute / Dimmer
	V. FORMAT		Picture / Format
	SLEEP		Sleep / Timer
	TEXT		Text / Goto
	TV / Radio		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Docs		Shift + Red / Netflix /
	0		0

Originalfernbedienung Ersatzfernbedienung

	Recall		Back / Return
	VOL+		Vol+
	MENU		Menu / Home
	EXIT		Exit / Cancel / Clear
	CH+		CH+ / Page+
	VOL-		Vol-
	UP		Up
	CH-		CH- / Page-
	LEFT		Left
	OK		OK
	RIGHT		Right
	PAGE DOWN		Shift + CH- /
	DOWN		Down
	PAGE UP		Shift + CH+ /
	FAV		Fav / Marker / PC
	GUIDE		Guide / EPG / -/-
	INFO		Info / Angle








 






Originalfernbedienung Ersatzfernbedienung

	SELECT		Smart / List
	RED		Red / Netflix / Search
	GREEN		Green / APP / Repeat
	YELLOW /		Yellow / YouTube / Repeat
	YELLOW /		Audio / Lang I/II
	BLUE /		Blue / Prime Video / Random
	BLUE /		Subtitle / EQ
	PLAY		Play / Slow
	STOP		Stop / Hold
	PAUSE		Pause / Step / Freeze
	REC		Rec / Rec Mode
	Doc		Shift + Green / APP /
	STEP		Shift + Pause / Step /
	REW		<< / Tune-
	FWD		>> / Tune+
	ZOOM		Zoom / Size
	> <		Shift + Stop /

Hold

Originalfernbedienung Ersatzfernbedienung

	I<<		I<< / Preset-
	>>I		>>I / Preset+
	SAT		Shift + 0
	PHOTO		Display / Media
	BOOK		Shift + Blue / Prime
	OPEN BOOK		Shift + Yellow / YouTube /

