



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	Inic		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	ZAP+		CH+ / Page+
	ZAP-		CH- / Page-

**Originalfernbedienung    Ersatzfernbedienung**

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	Portal		Display / Media
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Up		Up
	Selec		OK
	Down		Down
	Right		Right
	Left		Left
	Audio		Audio / Lang I/II
	Info		Info / Angle
	Serv		Setup / OPT /

