



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info / Angle
	Menu		Menu / Home
	Mute		Mute / Dimmer
	Guide		Guide / EPG / -/--
	Radio		TV/Radio /
	VOD		Display / Media
	HD		AV / Input / RDS
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Page Up		Shift + CH+ /
	Page Down		Shift + CH- /

Page-

 


 
Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	<<		I<< / Preset-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>		>> / Tune+
	>>		>>I / Preset+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Vol+		Vol+
	Recordings		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow / Fav		Yellow / YouTube / Repeat
	Yellow / Fav		Fav / Marker / PC
	Blue / Subtitle		Blue / Prime Video / Random
	Blue / Subtitle		Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung