 

 

 

 
 
 



 



 

 

 

 



 

 

 

 
 

 
 



 




 

 


 




Originalfernbedienung Ersatzfernbedienung

	Power Audio		Power
	Function		Smart / List
	Input		AV / Input / RDS
	Sleep / Dimmer		Sleep / Timer
	Sleep / Dimmer		Shift + Mute / Dimmer
	Return		Back / Return
	1		1
	2		2
	3		3
	Surround		Eject / Surround
	4		4
	5		5
	6		6
	Scan Mode		TV/Radio /
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	Subtitle		Subtitle / EQ
	Prog / Memo		Fav / Marker / PC
	Repeat		Green / APP / Repeat
	Clear		Exit / Cancel / Clear
	Top Menu		D.Menu / Top
	Up / Preset+		Up
	Up / Preset+		Shift + >>1 / Preset+
	Menu		Menu / Home
	Left / Tuning-		Left
	Left / Tuning-		Shift + << /
	Enter		OK
	Right / Tuning+		Right
	Right / Tuning+		Shift + >> /
	Set Up		Setup / OPT /
	Down / Preset-		Down
	Down / Preset-		Shift + I<< / Preset-





Originalfernbedienung Ersatzfernbedienung

	Display		Display / Media
	Stop		Stop / Hold
	Play / FM Mode		Play / Slow
	Pause		Pause / Step / Freeze
	Volume+		Vol+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Muting		Mute / Dimmer
	<< / Slow-		<< / Tune-
	>> / Slow+		>> / Tune+
	Volume-		Vol-

Originalfernbedienung Ersatzfernbedienung

