 





 











 



















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		1
	DVD		2
	Blu-ray		5
	Game		4
	Media Player		0
	CD		3
	Phono		7
	Tv/Audio		Guide / EPG / -/--
	Tuner		6
	USB		8
	Bluetooth		9
	Internet Radio		Fav / Marker / PC
	..I..		Smart / List
	CH/Page+		CH+ / Page+
	CH/Page-		CH- / Page-
	Eco		Display / Media

Originalfernbedienung Ersatzfernbedienung

	Volume+		Vol+
	Volume-		Vol-
	Mute		Mute / Dimmer
	Info		Info / Angle
	Option		Shift + Setup / OPT / Tools
	Back		Back / Return
	Setup		Setup / OPT /
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		OK
	Play		Play / Slow
	I<</Tune-		I<< / Preset-
	Pause		Pause / Step / Freeze
	>>I/Tune+		>>I / Preset+
	<</Band		<< / Tune-





Originalfernbedienung Ersatzfernbedienung

 

 



 

 

























	Stop/Mode		Stop / Hold
	>>/Memory		>> / Tune+
	Quick Select 1		Red / Netflix / Search
	Quick Select 2		Green / APP / Repeat
	Quick Select 3		Yellow / YouTube / Repeat
	Quick Select 4		Blue / Prime Video / Random
	Speaker		TV/Radio /
	Sleep		Sleep / Timer
	Dimmer		Shift + Mute / Dimmer
	Sound Mode		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		1
	DVD		2
	Blu-ray		5
	Game		4
	CD		3
	Media Player		0
	Phono		7
	Tv/Audio		Guide / EPG / -/--
	Tuner		6
	USB		8
	Bluetooth		9
	Internet Radio		Fav / Marker / PC
	..!..		Smart / List
	CH/Page+		CH+ / Page+
	CH/Page-		CH- / Page-
	Volume+		Vol+

 





Originalfernbedienung Ersatzfernbedienung

	Volume-		Vol-
	Mute		Mute / Dimmer
	Back		Back / Return
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		OK
	Play		Play / Slow
	I<</Tune-		I<< / Preset-
	Pause		Pause / Step / Freeze
	>>I/Tune+		>>I / Preset+
	<</Band		<< / Tune-
	Stop/Mode		Stop / Hold
	>>/Memory		>> / Tune+
	Quick Select 1		Red / Netflix / Search
	Quick Select 2		Green / APP / Repeat





Originalfernbedienung **Ersatzfernbedienung**

 Quick Select 3	 Yellow / YouTube / Repeat
 Quick Select 4	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer

Originalfernbedienung **Ersatzfernbedienung**

