









 



























Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------|---|----------------------|
|  | Power |  | Power |
|  | EQ |  | Subtitle / EQ |
|  | LG EQ |  | Audio / Lang I/II |
|  | Open/Close |  | Eject / Surround |
|  | Vol+ |  | Vol+ |
|  | Function |  | Smart / List |
|  | Preset/Folder+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Mute |  | Mute / Dimmer |
|  | Preset/Folder- |  | CH- / Page- |
|  | Sleep |  | Sleep / Timer |
|  | Repeat / Menu |  | Green / APP / Repeat |
|  | Repeat / Menu |  | Up |
|  | Repeat / Menu |  | Menu / Home |
|  | Info |  | Info / Angle |
|  | Left / I<< / Tun- |  | << / Tune- |
|  | Left / I<< / Tun- |  | I<< / Preset- |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------|---|-----------------------|
|  | Left / I<< / Tun- |  | Left |
|  | Stop / Enter |  | Stop / Hold |
|  | Stop / Enter |  | OK |
|  | Right / >>I / |  | >> / Tune+ |
|  | Right / >>I / |  | >>I / Preset+ |
|  | Right / >>I / |  | Right |
|  | Program/Memo |  | TV/Radio / |
|  | Down / |  | Play / Slow |
|  | Down / |  | Pause / Step / Freeze |
|  | Down / |  | Down |
|  | Rec |  | Rec / Rec Mode |
|  | Clock |  | D.Menu / Top |
|  | Timer |  | Shift + Sleep / Timer |
|  | Set/RDS |  | Display / Media |
|  | PTY |  | Setup / OPT / |
|  | 1 |  | 1 |
|  | 2 |  | 2 |



