


Originalfernbedienung Ersatzfernbedienung

	Picture Mode		Picture / Format
	DVD Status		Info / Angle
	Dubbing		Yellow / YouTube / Repeat
	VHS/DVD		Smart / List
	Quick Replay		Red / Netflix / Search
	Group		Zoom / Size
	P.Memory		Fav / Marker / PC
	Return		Back / Return
	AV Enhancer		AV / Input / RDS
	Direct Navigator / Top Menu		D.Menu / Top
	Play List / Menu		Menu / Home
	Play Mode		Shift + Play / Slow
	REW / << Slow/Search		<< / Tune-
	FF / Slow/Search		>> / Tune+
	VHS/DVD Power		Power
	Pause / Slow		Pause / Step / Freeze
	CH- / Tracking/V-Lock-		CH- / Page-

Originalfernbedienung Ersatzfernbedienung

	CH+ / Tracking/V-Lock+		CH+ / Page+
	Cancel / Reset		Exit / Cancel / Clear
	-/-- / >=10		Guide / EPG / -/--
	Play		Play / Slow
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Display		Display / Media
	Setup		Setup / OPT /
	Timer		Sleep / Timer
	0		0
	Audio		Audio / Lang I/II
	1		1
	2		2
	3		3



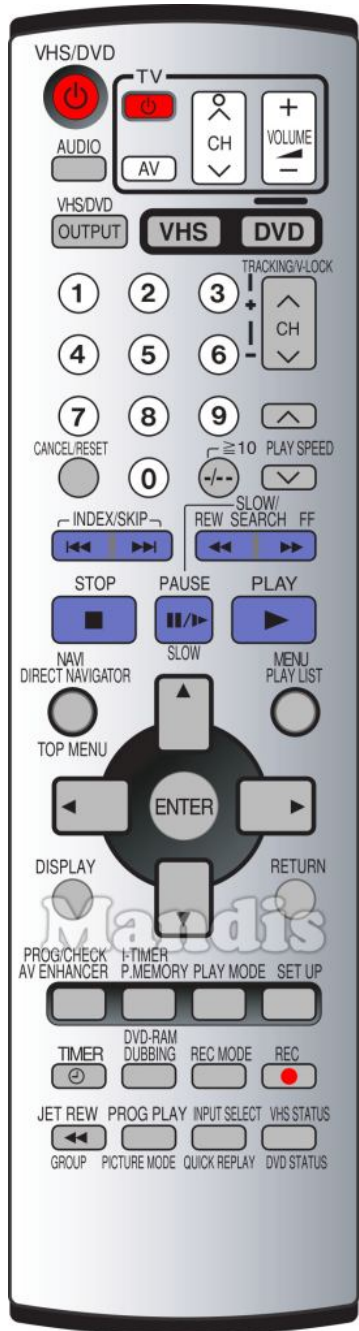


Originalfernbedienung Ersatzfernbedienung



 


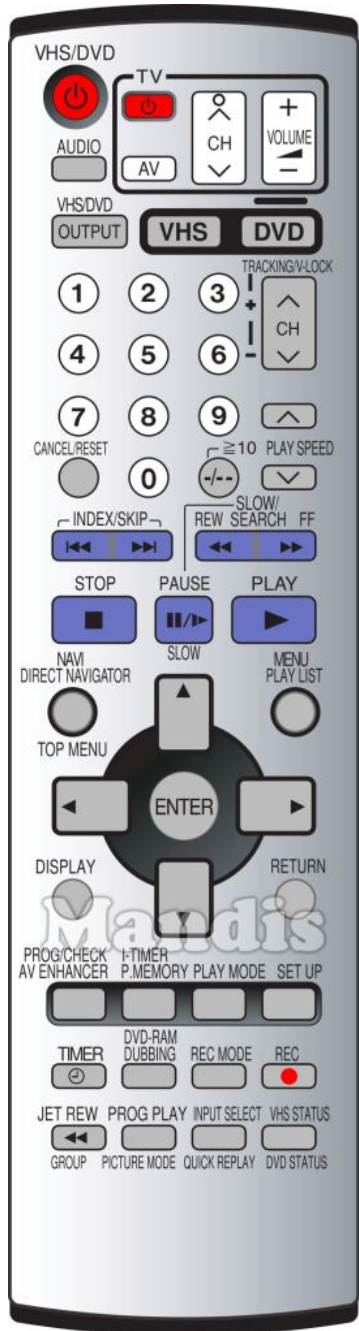


4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
INDEX/SKIP	I << Skip	PRESET-	I << / Preset-
X/SKIP	Skip >>I	PRESET+	>>I / Preset+
STOP	Stop	HOLD	Stop / Hold

Originalfernbedienung Ersatzfernbedienung






Originalfernbedienung Ersatzfernbedienung

	Prog Play		Shift + Play /
	I-Timer		Shift + Sleep / Timer
	Cancel / Reset		Exit / Cancel / Clear
	VHS/DVD		Smart / List
	Display		Display / Media
	VCR Status		Info / Angle
	Dubbing		Yellow / YouTube / Repeat
	Jet Rew		Shift + << /
	Pause / Slow		Pause / Step / Freeze
	CH+ / Tracking/V-Lock+		CH+ / Page+
	CH- / Tracking/V-Lock-		CH- / Page-
	VHS/DVD Power		Power
	-/-- / >=10		Guide / EPG / -/--
	Return		Back / Return
	Prog/Check		TV/Radio /
	I<< Index		I<< / Preset-
	Index >>I		>>I / Preset+







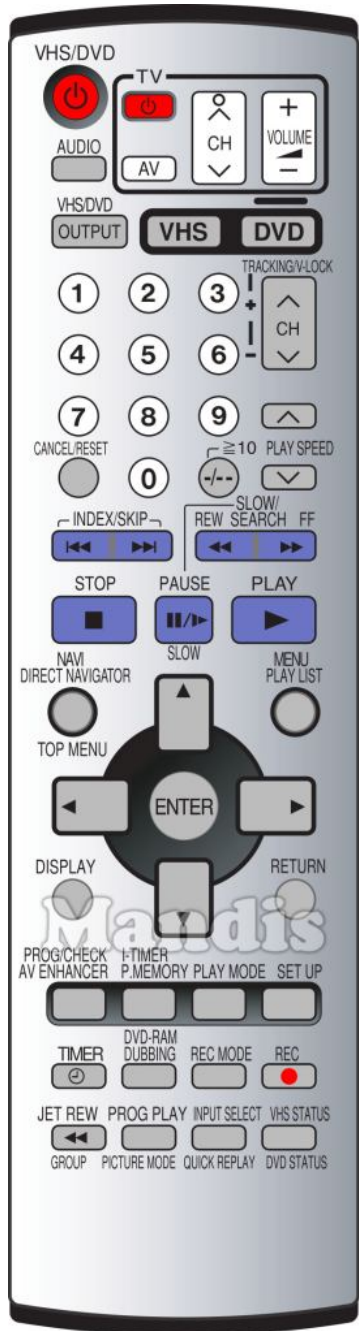





 


 
Originalfernbedienung Ersatzfernbedienung

	FF		>> / Tune+
	Play		Play / Slow
	Menu		Menu / Home
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Stop		Stop / Hold
	Rec Mode		Shift + Rec / Rec Mode
	Timer		Sleep / Timer
	Rec		Rec / Rec Mode
	0		0
	Audio		Audio / Lang I/II
	1		1
	2		2
	3		3






Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Input Select		AV / Input / RDS
	REW		<< / Tune-

Originalfernbedienung Ersatzfernbedienung



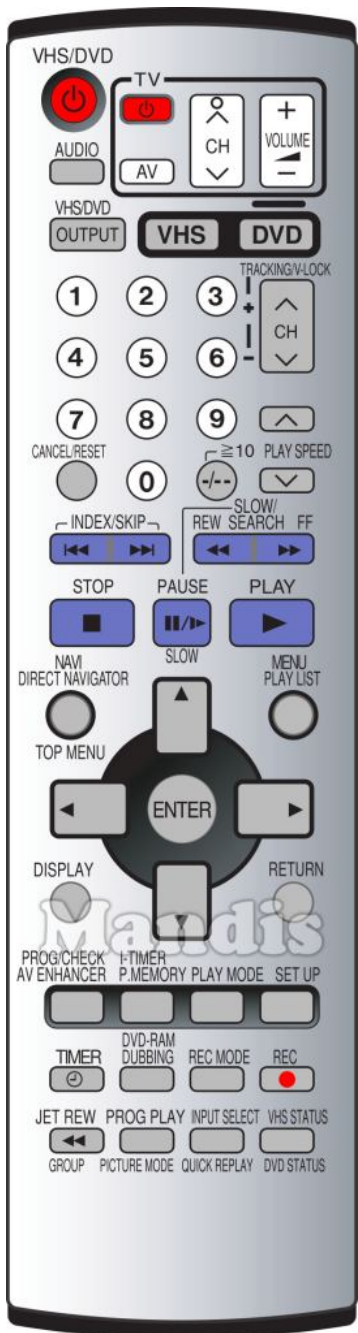

Originalfernbedienung Ersatzfernbedienung

Power		Power
AV		AV / Input / RDS
Volume+		Vol+
Volume-		Vol-
CH+		CH+ / Page+
CH-		CH- / Page-

Originalfernbedienung Ersatzfernbedienung

