



























 








 





















 


 

 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV/AV		AV / Input / RDS
	Q.View		Fav / Marker / PC
	Up		Up
	Prog+		CH+ / Page+





 

 

 



 

 
 


 


 
 

Originalfernbedienung Ersatzfernbedienung

	Prog-		CH- / Page-
	Down		Down
	Right		Right
	Vol+		Vol+
	Left		Left
	Vol-		Vol-
	OK		OK
	Menu		Menu / Home
	Zoom		Zoom / Size
	I/II		Audio / Lang I/II
	Info		Info / Angle
	P.Timer		Sleep / Timer
	Swap		Back / Return
	Picture		Picture / Format
	Timer		Shift + Sleep / Timer
	Sound		Sound / Title
	Red		Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Index		Display / Media
	Hold		Stop / Hold
	Size		Shift + Zoom /
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	Mix		Shift + Text /
	Reveal		D.Menu / Top
	Cancel		Exit / Cancel / Clear
	Sub Code		Shift + Back / Return

Originalfernbedienung Ersatzfernbedienung

