




 
 





















 

 

 



 









Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Tv/Radio		TV/Radio /
	Blank		Sleep / Timer
	T.Opt.		Sound / Title
	Text		Text / Goto
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		Smart / List

Originalfernbedienung    Ersatzfernbedienung

	Q.View		Picture / Format
	FAV		Fav / Marker / PC
	3D		Zoom / Size
	Mute		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	Page+		CH+ / Page+
	Page-		CH- / Page-
	L/R		Audio / Lang I/II
	Info		Info / Angle
	Still		Menu / Home
	Settings		Setup / OPT /
	Q.Menu		D.Menu / Top
	Up		Up
	Down		Down
	Left		Left
	Right		Right





Originalfernbedienung

Ersatzfernbedienung

	OK		OK
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Subtitle		Subtitle / EQ
	Guide		Guide / EPG / -/--
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung

Ersatzfernbedienung