 



 

 

 
 

 

 

 

 

 

 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	Index		Play / Slow
	Red / -1		Red / Netflix / Search
	Green / Timer /		Green / APP / Repeat
	Yellow / Stop		Yellow / YouTube / Repeat
	Blue / Reveal		Blue / Prime Video / Random
	[≡]]]		Rec / Rec Mode
	Cancel		Exit / Cancel / Clear
	Size		Zoom / Size
	TV		TV/Radio /
	Text		Text / Goto
	1		1
	2		2
	3		3
	Tint-		Shift + Left
	Tint+		Shift + Right
	4		4
	5		5




 



 




 



 

 





Originalfernbedienung Ersatzfernbedienung

	6		6
	Contrast-		<< / Tune-
	Contrast+		>> / Tune+
	7		7
	8		8
	9		9
	Brightness-		I<< / Preset-
	Brightness+		>>I / Preset+
	P/C		Back / Return
	0		0
	AV		AV / Input / RDS
	←•→		Display / Media
	**		Smart / List
	PIP		Picture / Format
	i		Info / Angle
	i		Menu / Home
	----		Subtitle / EQ





Originalfernbedienung Ersatzfernbedienung

	Red		Red / Netflix / Search
	Green/Timer		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TXT		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	-0		<< / Tune-
	0+		>> / Tune+
	7		7
	8		8
	9		9
	-*		I<< / Preset-

Originalfernbedienung Ersatzfernbedienung

	*+		>>I / Preset+
	P/C		Back / Return
	0		0
	PIP		Picture / Format
	i		Info / Angle
	P+		CH+ / Page+
	Up		Up
	Mute		Mute / Dimmer
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	AUX		Shift + 7
	P-		CH- / Page-
	Down		Down
	Power		Power

