






 






 











 



 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Fav		Fav / Marker / PC
	0		0
	Info		Info / Angle
	Back		Back / Return
	EPG		Guide / EPG / -/--
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Up / CH+		Up
	Exit		Exit / Cancel / Clear
	Left / Vol-		Vol-
	Left / Vol-		Left
	OK		OK
	Right / Vol+		Vol+
	Right / Vol+		Right
	Down / CH-		Down
	Ratio		Picture / Format
	Page+		CH+ / Page+
	TV / Rad		TV/Radio /
	HDMI Res		Setup / OPT /
	Page-		CH- / Page-
	SOS		Sound / Title
	Red / Sub		Red / Netflix / Search
	Red / Sub		Subtitle / EQ
	Green / Lang		Green / APP / Repeat



