



 



 
 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Fav / Marker / PC
	Recall		Back / Return
	Menu		Menu / Home
	Source		AV / Input / RDS
	EPG		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Up/FAV+		Up
	Down/FAV-		Down
	Left		Left
	Right		Right
	Enter		OK
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Display		Display / Media
	Open/Close/Smart		Eject / Surround
	VOL+		Vol+
	Vol-		Vol-
	USB/Media		Shift + Display / Media
	Play/Pause/Text		Play / Slow
	Stop/Index		Stop / Hold
	Rec/Media2		Rec / Rec Mode
	I<</Hold		I<< / Preset-





**Originalfernbedienung Ersatzfernbedienung**

	>> /Size		>>  / Preset+
	<</S.Page		<< / Tune-
	>>/Reveal		>> / Tune+
	Red/Goto		Red / Netflix / Search
	Green/Slow		Green / APP / Repeat
	Yellow/REPT		Yellow / YouTube / Repeat
	Blue/A-B		Blue / Prime Video / Random
	D.Setup		Setup / OPT /
	D.Menu		D.Menu / Top
	D.Title		Smart / List
	D.Prog		Text / Goto
	I-II/Nicam		Shift + Picture / Format
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	P.Size		Zoom / Size
	Audio		Audio / Lang I/II
	Sleep		Sleep / Timer

**Originalfernbedienung Ersatzfernbedienung**

	S.Title		Pause / Step / Freeze
	Tv/Radio		TV/Radio /

