 







 

 





 



 




 








 









 

 


 






















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / AV		0
	0 / AV		AV / Input / RDS
	P↔P		Back / Return
	Timer		Sleep / Timer
	Menu		Menu / Home
	Enter		OK
	Up / P+		Up

Originalfernbedienung Ersatzfernbedienung

	Up / P+		CH+ / Page+
	Left / Vol-		Left
	Left / Vol-		Vol-
	Right / Vol+		Right
	Right / Vol+		Vol+
	Down / P-		Down
	Down / P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow / FT-		Yellow / YouTube / Repeat
	Blue / FT+		Blue / Prime Video / Random
	Text Memo		Smart / List
	Info		Info / Angle
	Mute		Mute / Dimmer
	Text Cancel		Display / Media
	Text		Text / Goto
	Skip		Sound / Title



