











 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------|---|------------------|
|  | Power |  | Power |
|  | Display |  | Display / Media |
|  | Play/Pause iPod |  | Shift + Play / |
|  | Play/Pause iPod |  | Play / Slow |
|  | Play/Pause USB |  | 8 |
|  | Play/Pause CD |  | 3 |
|  | Tuner/PC/Audio In |  | Smart / List |
|  | CD/USB |  | AV / Input / RDS |
|  | Menu/Cancel |  | Menu / Home |
|  | Up |  | Up |
|  | Down |  | Down |
|  | I<< |  | I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
|  | Set |  | OK |
|  | Stop/PTY |  | Stop / Hold |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------------------------|
|  | Program |  | TV/Radio / |
|  | Random |  | Blue / Prime Video / Random |
|  | Repeat/Tuner |  | Green / APP / Repeat |
|  | Clock/Timer |  | Shift + Sleep / Timer |
|  | APS |  | Shift + Smart / List |
|  | Sleep |  | Sleep / Timer |
|  | Muting |  | Mute / Dimmer |
|  | Sound Turbo |  | Audio / Lang I/II |
|  | HBS |  | CH- / Page- |
|  | Sound Mode |  | Sound / Title |
|  | Surround |  | Eject / Surround |
|  | Resume |  | D.Menu / Top |
|  | Dimmer |  | Shift + Mute / Dimmer |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |

