






Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off		Shift + Power
	Mode		Picture / Format
	Open/Close		Eject / Surround
	A-B Repeat		Yellow / YouTube / Repeat
	Repeat		Green / APP / Repeat
	Random		Blue / Prime Video / Random
	Zoom		Zoom / Size
	Angle		Info / Angle
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Display		Display / Media
	Clear		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4

Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide / EPG / -/-
	Menu		Menu / Home
	Top Menu		D.Menu / Top
	Return		Back / Return
	Setup		Setup / OPT /
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		OK
	Search Mode		Red / Netflix / Search



