



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Display		Display / Media
	Tuner Memory		Zoom / Size
	Play Mode/Tuning Mode		TV/Radio /
	Folder-		CH- / Page-
	Repeat/FM		Picture / Format
	Clock/Timer		Up
	Clock/Timer Set		Down
	Audio In		Audio / Lang I/II
	CD		3
	Band/Tuner		Shift + TV/Radio / Program
	Function		D.Menu / Top
	I<</-		I<< / Preset-
	>>I/+		>>I / Preset+
	<</<		<< / Tune-
	>>/>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Clear		Exit / Cancel / Clear
	EQ		Subtitle / EQ
	Vol+		Vol+
	Vol-		Vol-
	Enter		OK
	Disk Skip		Fav / Marker / PC
	Folder+		CH+ / Page+

