




 








 




 














 


 
 


Originalfernbedienung Ersatzfernbedienung

Shuffle	 + 	Shift + Blue / Prime
Np		Eject / Surround
Digest		Setup / OPT /
Auto/Track		Smart / List
C/CH		Text / Goto
Echo+	 + 	Shift + CH+ /
Echo-	 + 	Shift + CH- /
3D	 + 	Shift + 3
Slow Up		CH+ / Page+
Slow Down		CH- / Page-
Play/Back		Exit / Cancel / Clear
Resume	 + 	Shift + Play /
DVD/TV		AV / Input / RDS
3		3
Karaoke/Step	 + 	Shift + Pause / Step /
Repeat/1/All		Green / APP / Repeat
Progr.		TV/Radio /

Originalfernbedienung Ersatzfernbedienung

4		4
5		5
6		6
7		7
8		8
9		9
+10		Guide / EPG / -/--
0		0
Record		Rec / Rec Mode
Rewind		<< / Tune-
Play		Play / Slow
F.Forward		>> / Tune+
2		2
Video	 + 	Shift + 4
Audio		Audio / Lang I/II
Angle		Info / Angle
Lang	 + 	Shift + Audio / Lang I/II



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Random		Blue / Prime Video / Random	
Menu Up		Up	
Audio Off		Mute / Dimmer	
Stop		Stop / Hold	
Pause		Pause / Step / Freeze	
Subt.		Subtitle / EQ	
Rep/A-B		Yellow / YouTube / Repeat	
Title		Sound / Title	
Zoom		Zoom / Size	
Menu		Menu / Home	
On/Off		Power	
Display		Display / Media	
Menu Left		Left	
OK Enter		OK	
Menu Right		Right	
Return		Back / Return	
Menu Down		Down	
Volume+		Vol+	
Next		>> / Preset+	
Volume-		Vol-	
Top Menu		D.Menu / Top	
Prev.		<< / Preset-	
1		1	

