







 

 

 

 

 





 

 

 

 









**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Open/Close		Eject / Surround
	Preset/Folder Up		CH+ / Page+
	Function		Display / Media
	Vol+		Vol+
	Preset/Folder		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	Program/Memor		TV/Radio /
	USB Rec		Rec / Rec Mode
	I<< / Tuning- / Left		<< / Tune-
	I<< / Tuning- / Left		I<< / Preset-
	I<< / Tuning- / Left		Left
	Repeat (Menu) /		Green / APP / Repeat
	Repeat (Menu) /		Up
	Repeat (Menu) /		Menu / Home
	>>I / Tuning+ / Right		>>I / Preset+

**Originalfernbedienung Ersatzfernbedienung**

	>>I / Tuning+ / Right		>> / Tune+
	>>I / Tuning+ / Right		Right
	Stop / Enter		Stop / Hold
	Stop / Enter		OK
	Play/Pause /		Play / Slow
	Play/Pause /		Pause / Step / Freeze
	Play/Pause /		Down
	Sound Effect		Sound / Title
	Auto DJ		Smart / List
	Delete		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Originalfernbedienung Ersatzfernbedienung

8	8	USB 8	8
9	9	BLUETOOTH 9	9
INFO	Info	ANGLE INFO	Info / Angle
0	0	HDMI - SAT 0	0
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
RDS	RDS	YouTube REPEAT A-B	Yellow / YouTube / Repeat
PTY	PTY	Prime Video RANDOM	Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung