





 



 

 



 

 

 

 





 

































 

 







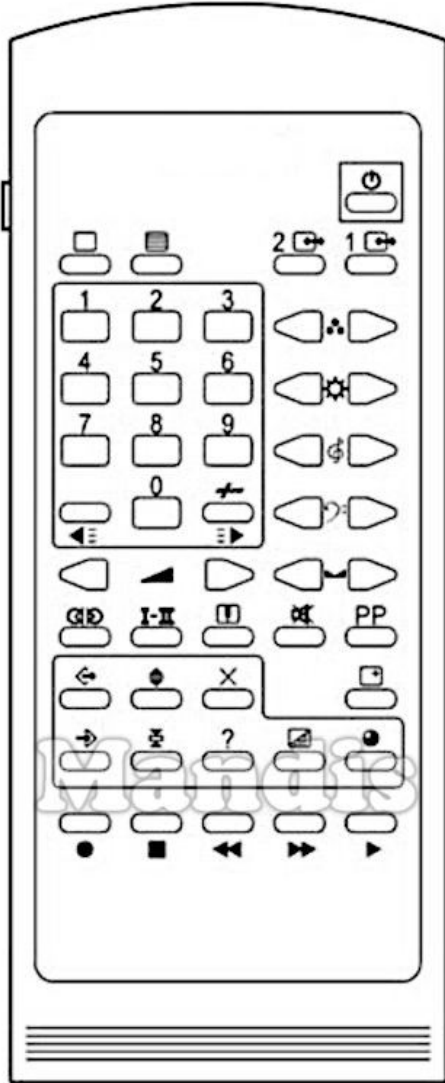
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		Smart / List
	Text		Text / Goto
	Source 2		Shift + AV / Input / RDS
	Source 1		AV / Input / RDS
	1		1
	2		2
	3		3
	Contrast-		I<< / Preset-
	Contrast+		>>I / Preset+
	4		4
	5		5
	6		6
	Brightness-		Down
	Brightness+		Up
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	Sol-		<< / Tune-
	Sol+		>> / Tune+
	=<		Shift + CH- /
	0		0
	-/ / =>		Shift + CH+ /
	-/ / =>		Guide / EPG / -/-
	Fa-		Left
	Fa+		Right
	Vol-		Vol-
	Vol+		Vol+
	><-		CH- / Page-
	><+		CH+ / Page+
	OO		Sound / Title
	I-II		Audio / Lang I/II
	[   ]		Zoom / Size
	Mute		Mute / Dimmer





Originalfernbedienung   Ersatzfernbedienung

	PP		Back / Return
	Exit		Exit / Cancel / Clear
	Size	+	Shift + Zoom /
	Cancel	+	Shift + Exit / Cancel / Clear
	[ + ]		Info / Angle
	Enter		OK
	Hold		Stop / Hold
	Reveal		TV/Radio /
	Mix	+	Shift + Text /
	Subcode		Subtitle / EQ

Originalfernbedienung   Ersatzfernbedienung