

 

 



 



 
 
 





 





 

 








**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	VOD		Display / Media
	0		0
	TV		TV/Radio /
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-

**Originalfernbedienung Ersatzfernbedienung**

	P-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	List		Smart / List
	Guide		Guide / EPG / -/-
	Info		Info / Angle
	Mos		D.Menu / Top
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze





**Originalfernbedienung    Ersatzfernbedienung**

	<<		<< / Tune-
	>>		>> / Tune+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

**Originalfernbedienung    Ersatzfernbedienung**