


 


 


 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit / Cancel / Clear
	Enter		Fav / Marker / PC
	Time/Text		Setup / OPT /
	Picture Mode		Sleep / Timer
	Audio		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subtitle / EQ
	Angle		Red / Netflix / Search
	Sur		Eject / Surround
	Search Mode		AV / Input / RDS
	Repeat		Shift + Setup / OPT / Tools
	A-B		Shift + Play /
	Shuffle		Yellow / YouTube / Repeat
	SA-CD		Smart / List
	Album+		CH+ / Page+
	Album-		CH- / Page-
	Zoom		Shift + Text /
	Picture Navi		Zoom / Size
	>>		>> / Preset+
	<<		<< / Tune-
	>> / >		<< / Preset-
	<< / <		>> / Tune+
	← / <		Shift + << /

Tune-



