



 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Menu		Menu / Home
	Source		AV / Input / RDS
	DV		Display / Media
	Live TV		Smart / List
	Green / Audio		Audio / Lang / I/II
	Green / Audio		Shift + Green / APP / REPEAT
	Yellow / Sub-T		Subtitle / EQ
	Yellow / Sub-T		Shift + Yellow / YouTube / REPEAT A-B
	Blue / Angle		Shift + Info / Angle
	Blue / Angle		Shift + Blue / Prime
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	Copy		Shift + Guide / EPG / -/-
	0		0
	Delete		Shift + Fav / Marker / PC
	Goto		Text / Goto
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Guide		Guide / EPG / -/-
	I<<		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>>I		>>I / Preset+
	Volume+		Vol+
	Mute		Mute / Dimmer
	Channel+		CH+ / Page+



