




 













Originalfernbedienung Ersatzfernbedienung


 
	Power		Power
	Info		Info / Angle
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Input		AV / Input / RDS
	0		0
	I/II Audio		Audio / Lang I/II
	P.Mode		Picture / Format
	S.Mode		Sound / Title

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	Enter		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	Zoom		Zoom / Size
	EPG		Guide / EPG / -/-
	List		Smart / List
	Recall		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat




Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	Still		Pause / Step / Freeze
	Subtitle		Subtitle / EQ
	Radio / E/W		TV/Radio /
	Sleep		Sleep / Timer
	Index		Display / Media
	Fav-		I<< / Preset-
	Fav+		>>I / Preset+

Originalfernbedienung Ersatzfernbedienung

