







 



 












 
 


 





 



















 















Originalfernbedienung Ersatzfernbedienung

	Clear/Dimmer		Mute / Dimmer
	Memory		OK
	On/Standby		Power
	CD		Shift + 3
	Stop CD		Stop / Hold
	Play/Pause CD		Play / Slow
	Tuner(Band)		Shift + 6
	Play/Pause iPod		Pause / Step / Freeze
	Audio In /iPod		Audio / Lang I/II
	I<</Preset		I<< / Preset-
	Tuning Cursor Up		Up
	>>I/Preset Up		>>I / Preset+
	Tuning Cursor		Down
	Play Mode		Red / Netflix / Search
	Display		Display / Media
	Folder		Info / Angle
	Clock/Timer		Sleep / Timer

 

Originalfernbedienung Ersatzfernbedienung

	ASPM RDS		D.Menu / Top
	PTY RDS		Setup / OPT /
	Display RDS		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide / EPG / -/-
	Equalizer Mode		Sound / Title
	X-Bass/Demo		Subtitle / EQ
	Vol-		Vol-





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
	Vol+
	

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

