




















 


 

 





























 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Muting		Mute / Dimmer
	1		1
	Clock		Setup / OPT /
	2		2
	Timer		Shift + Sleep / Timer
	3		3
	4		4
	Tuner Mode		Info / Angle
	5		5
	Rev Mode		Back / Return
	Resume		Menu / Home
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/-

Originalfernbedienung Ersatzfernbedienung

	10/0		0
	CD Edit/Check		Text / Goto
	Shift Clear		Shift + Exit / Cancel / Clear
	Clear		Exit / Cancel / Clear
	Shuffle/Program		Blue / Prime Video / Random
	Shuffle/Program		TV/Radio /
	Preset Up		Shift + >>I / Preset+
	Preset Up		Up
	Preset Down		Down
	I<</<<		<< / Tune-
	I<</<<		I<< / Preset-
	I<</<<		Left
	Enter		OK
	>>/>>I		>> / Tune+
	>>/>>I		Right
	>>/>>I		>>I / Preset+
	Repeat		Green / APP / Repeat



